


Pneu-Power Ion Gun No.G-9

CE RoHS

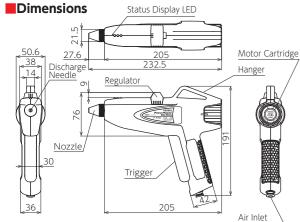

Silent Nozzle N-2WN EDP No. 806087 Straight Silent Nozzle BB-ZSN EDP No. 621708 Plug with Urethane Tube G-9UTP EDP No. 806148

■ Replacement Parts

Needle Electrode GN-H EDP No.806124 Screwdriver for Needle Electrode Replacement G-7DR EDP No.806061

Motor Cartridge G-9MC EDP No.806147


Specifications

Model	G-9						
Туре	High voltage type ionizer						
Structure	Direct-coupled						
Applied High Voltage	Coiled transformer (Built-in)						
Ionizing Method	AC corona discharge type						
Applied Voltage/Frequency	8k VAC p-p (±5%)/ 32kHz (Typ.)						
Air Connection	8mm tube applicable, one-touch joint						
Operating Fluid/Input Pressure	Clean dry air/ 0.3~0.6 MPa (Rating 0.5MPa)						
Air Consumption	200L/min (0.5MPa)						
Air Speed	12.3m/s (0.5MPa, 200L/min, 150mm)						
Decay Time	±1000V→±100V: 1 sec. or less (0.5MPa, 200L/min, 150mm)						
Ion Balance	±30V (0.5MPa, 200L/min, 1m)						
Noise	88dBA (0.5MPa, 200L/min, 1m)						
Protective Circuit	High voltage short detection circuit/ automatic stop/ automatic recovery						
Operating Temp./Humidity	0~+45 ℃/ 10~90 %RH						
	(without freezing or dew condensation)						
Storage Temp./Humidity	-30~+50 ℃/ 10~90 %RH						
	(without freezing or dew condensation)						
Material	Main body, Nozzle, Motor cartridge: Polycarbonate						
	Discharge needle: Tungsten						
Size	H191 x W232.5 x D50.6 mm						
Weight	Approx. 470 g						
Installation	Indoor						

Instruction manual

■ Actual Measurement Data (For reference)

Left-Right Distance		50 mm	100 mm	150 mm	200 mm	250 mm	300 mm
	Ion Balance	0	0	0	0	0	0
150 mm	Decay Time (+)	>10	>10	>10	>10	>10	>10
	Decay Time (-)	>10	>10	>10	>10	>10	>10
	Ion Balance	7	-5	-3	-2	-1	0
100 mm	Decay Time (+)	>10	3.07	2.82	0.96	1.82	1.02
	Decay Time (-)	>10	3.13	2.5	0.99	1.93	1.11
50 mm	Ion Balance	-4	-2	-2	-1	0	0
	Decay Time (+)	0.61	0.63	0.59	0.62	0.66	0.73
	Decay Time (-)	0.74	0.59	0.58	0.64	0.67	0.77
±0 mm	Ion Balance	-3	-3	3	-1	0	-1
	Decay Time (+)	0.59	0.57	0.63	0.61	0.64	0.71
	Decay Time (-)	0.65	0.62	0.6	0.59	0.64	0.68
	Ion Balance	-3	-2	-2	-1	-1	0
50 mm	Decay Time (+)	0.61	0.58	0.59	0.65	0.69	0.75
	Decay Time (-)	0.67	0.63	0.6	0.65	0.68	0.79
	Ion Balance	-2	-2	-3	-1	-1	-1
100 mm	Decay Time (+)	>10	4.69	3.46	2.47	1.2	2.32
	Decay Time (-)	>10	6.5	3.04	3.09	1.32	2.39
	Ion Balance	-10	-7	-1	0	0	0
150 mm	Decay Time (+)	>10	>10	>10	>10	>10	>10
	Decay Time (-)	>10	>10	>10	>10	>10	>10

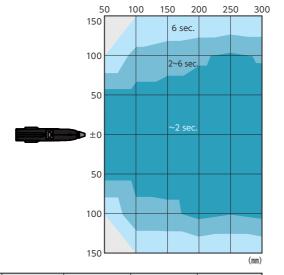

^{*} Air pressure: 0.5MPa, Air volume: 203L/min, Decay time: ±1000V → ±100V (Model7100)

Measurement Data	ent Data Air Volume (L/min) Air Speed (m/s)					Noise (dB-A) Standard Nozzle		N-2WN		BB-ZSN					
Air Pressure	LED Instanta Yellow → Green	neous Value Red → Green	50 mm	100 mm	150 mm	200 mm	250 mm	300 mm	Air Pressure	Air Vol.	Noise	Air Vol.	Noise	Air Vol.	Noise
0.3 MPa	126	198	8.8	8.6	7.8	7.6	7.3	6.9	0.3 MPa	158	83.1	157	72.4	139	73.3
0.5 MPa	138	208	15.1	13.8	12.3	11.5	11.1	10.6	0.5 MPa	(223)	104.8	(233)	80.2	(215)	81.6

Accessories

Recommended Maintenance Frequency

Discharge needle and the surroundings ... 1 week Motor cartridge ... 6 months (to be replaced)

■Estimated Lifetime

Main body ... 5 years

Motor cartridge ... 6 months

* This information is shown for reference only. This is not a guarantee.



● For your safety, read the instruction manual carefully before using this product. ● Never use this product in hazardous area requiring explosion proof measures. ● A high voltage is applied on this product. Make sure that water, oil, etc., do not come in contact. ● Avoid condensation as it can result in electric shock or product damage. ● Keep away metal objects such as tools or wires, or body parts such as fingers, hands, or face from the discharge needle due to applied high voltage.

VESSEL Co., Inc.
17-25, Fukae-kita 2-chome, Higashinari-ku, Osaka 537-0001 JAPAN

VESSEL EUROPE

6, avenue du 1er Mai, ZAE Les Glaises, 91120 Palaiseau FRANCE Tel: +33(0)1 69 19 17 42 Fax: +33(0)1 69 19 42 20

E-mail: export@vessel.co.jp URL: http://www.vessel.co.jp/english/

• For improvements, the product specifications, size, price and other information may be subject to change without prior notice.

Distributed by

Printed in Japan 19012821.025

Static Electricity Removal Pneu-Power Ion Gun (EROHS No.G-9 No More Power Cable! Innovative ionizing gun working only with compressed air! STAT-CLE

Innovation! No need for electric wiring.

Advantages of Pneu-Power Ion Gun (Self-power generating ionizer)

(1) No more cable troubles!

Troubles in relation to an electric power cable, that is most frequently encountered with ionizing guns, no longer occur.

(2) No separate high voltage power unit Neither outlet nor extended high voltage cable is required.

(3) Efficient use of space as air tube only is mandatory.

Safe especially in applications where operators need to move widely (e.g because of large parts)

Outstanding ionizing performance and ion balance

Decay time: within 1 sec., Ion balance: within 30V

Low noise

84dBA under 0.3MPa. Optional Silent Nozzles (below) enable to decrease the noise level further.

No.BB-ZSN **73dBA**

No.N-2WN **72dBA**









Tungsten electrode can be replaced when worn out.

Regulator and Adjustment Lamp Unless air volume is appr

Trigger

Light force is required

to activate the air supply

Unless air volume is appropriate, the motor will not generate enough power. Adjust the air volume with the regulator to the point that the LED lamp illuminates in green.

Motor Cartridge (Replaceable)

Convert compressed air to electricity. The compressed air rotates the blades to generate electricity and supplies power to the device.

Power supply from an external device is not required.

Air turbine rotates the motor, and this generates the power for ion generation.

Structure

Coiled High Voltage TransformerIon generation method is AC corona discharge.

Hanger + Metal Fitting

There is reinforced metal fitting

in the hanging part.

Supplied compressed air is diverged into 2 routes: one is for power generation and another for dust removal.

After the motor generates enough power, the air joins again and blows out from the tip of the gun. When the air pressure increases, a special valve opens to extract the overflow, preventing the motor from overspeeding (patent).

Comply with C RoHS



Air Joint

 $\Phi8 \times \Phi5$ air tube applicable. A combination of air tube (black) 3 m + air plug of $\Phi8 \times \Phi5$ is available as an option (G-9UTP).

Static Electricity Removal Pneu-Power Ion Gun

Eliminate static electricity only with compressed air!

Applications

Removal of static electricity and/or dust in the following cases:

- * Before painting process of large parts for cars, furniture, music instruments;
- * Before bringing into a clean room parts which are just taken out of the package;
- * Big size film, sheet material, and so on.



